

Alpha RTK Receiver User Guide Reminder for RTK Starter Kit Users

Except for topics related to below differences, the Alpha RTK Receiver user guide is applicable for the RTK Start Kit.

	Starter Kit RTK Receiver	Alpha RTK Receiver
Enclosure	N	Y
Receiver Type	L1 GPS + L1 GLONASS or L1 GPS + B1 Beidou Programmable	L1 GPS + L1 GLONASS or L1 GPS + B1 Beidou Programmable
Bluetooth	N	Y
UART	Y	Y
USB	Y	Y
RTK Update Rate (Hz)	1	1 / 2 / 4 / 5 / 8 / 10
Carrier Phase Raw Measurement Output	Y	Y
16GB SD Card & Raw Measurement Logging Capability	Y	Y
External Triggered RTK Position Stamp	N	Y
Usage Plan	No Usage Plan, Perpetual Use	\$65/year or \$190/Unlimited